

UmTRX - Feature #3747

LMS6002D RX Gain Control

01/08/2019 02:53 AM - jahredibanez

Status:	New	Start date:	01/08/2019
Priority:	Normal	Due date:	
Assignee:	ipse	% Done:	0%
Category:	FPGA		
Target version:	UmTRXv2.2		
Resolution:		Spec Reference:	
Description			
Hi, with OSMO Rx-Gain Setting for UmTRX			
osmotrx rx-gain <0-50>			
Set the receiver gain (configured in the hardware) in dB			
LMS6002D Transceiver has gain blocks for RXLNA, RXVGA1, RXLPF, and RXVGA2.			
which block does this setting change? and how does it change these values?			

History

#1 - 01/08/2019 09:46 AM - laforge

- Assignee changed from Osmocom CNI Developers to ipse